POWER VISION 3

Installation Guide for: PV3-15-02

Model Coverage:

2011-2017 Harley Davidson Softail Models 96" Twin Cam / 103" Twin Cam

2012-2017 Harley Davidson Dyna Models 96" Twin Cam / 103" Twin Cam

2014-2016 Harley Davidson Touring Models
96" Twin Cam / 103" Twin Cam / 110" Twin Cam

2018-2021 Harley Davidson Softail Models 107" Milwaukee M8 / 114" Milwaukee M8

2017-2020 Harley Davidson Touring Models 107" M8 / 114" M8 / 117" M8

2014-2021 Harley Davidson Sportster 883 Models

2014-2021 Harley Davidson Sportster 1200 Models

2015-2019 Harley Davidson Street 500

2015-2021 Harley Davidson Street 750

PARTS LIST


1 POWER VISION

- 2 VELCRO
- 1 REFLASH HARNESS
- 2 DYNOJET DECAL


1 USB CABLE

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

INTRODUCTION

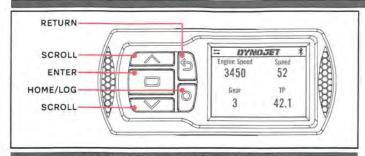

POWER VISION OVERVIEW—FRONT VIEW

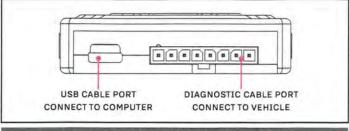

POWER VISION OVERVIEW—SIDE VIEW

Thank you for purchasing the Power Vision from Dynojet Research. At Dynojet, our mission is to make every ride the ultimate ride. The Power Vision allows you to tune your stock ECU to achieve optimal performance from your vehicle.

The Power Vision is the device to interface between your computer and the vehicle ECU. Use the buttons to navigate the device menus, make selections, cycle through the four full-color available gauge screens, and log data. Connect to the diagnostic port to flash a tune; use the USB connection to interface between the Power Vision and your computer.

Make your Power Vision device yours; display the channels you want to see with four user-customizable full-color gauge screens. Make the Power Vision your window into your vehicle; secure the Power Vision to your dashboard or handlebars to monitor any desired set of gauges such as Throttle Position, Engine Speed, and more. Wideband Air: Fuel Ratio and integrated belt temperature can be added as channels to the PV3's monitors by adding the accessories available at www.dynojet.com.

For state of the art technical support, please visit www.dynojet.zendesk.com.

INSTALLING THE POWER VISION



DIAGNOSTIC PORT

This installation was done on a Harley-Davidson Night Rod. Your bike and set-up may vary.

1 Attach the diagnostic cable to the diagnostic port on the Power Vision and to the diagnostic port on the vehicle. Refer to the Diagnostic Port Location on page 3.

Note: The Power Vision may be damaged if installed improperly. The location of the diagnostic port varies depending on the model, please refer to a service manual or contact Dynojet for the exact location. Use caution as many models use the same style connector for accessories; your Power Vision MUST be connected to the diagnostic port.

INSTALLING THE POWER VISION CONTINUED



ROUTING THE CABLE

- 2 Route the Power Vision cable away from any moving or hot parts. Dynojet recommends using zip ties to secure the cable to existing non-moving components.
- 3 Secure the Power Vision to the vehicle using the supplied Velcro or mounting hardware. Make sure the Power Vision will not interfere with the operation of the vehicle. Visit www.dynojet.com for an array of mounting solutions for your Power Vision.

Note: The Power Vision does not need to be mounted to the vehicle, however, the Power Vision provides a window into your vehicle. Mount the Power Vision to your handlebars and gain access to customizable full-color gauge screens, along with data logging and troubleshooting screens.

DIAGNOSTIC PORT LOCATION



2012-2017 Dyna Models
Diagnostic connector is located behind the Left hand
side cover. Connector is Light Grey in color with black
rubber plug installed.



2014-2020 Touring Models
Diagnostic connector is located behind the left hand side cover. Connector is Light Grey in color with a black rubber plug installed.



2015-2021 Street Models
Diagnostic connector is located behind right hand side cover. Connector is Light Grey in color with black rubber plug installed.



2014-2021 Sportster Models (including XR Models) Diagnostic connector is located behind the Left hand side cover. Connector is Light Grey in color with black rubber plug installed.



2011-2017 Softail Models
Diagnostic connector is located under the seat,
attached to the frame by the rear fender. Connector is
Light Grey in color, with black rubber plug installed.



GETTING STARTED

Use the Tune File Wizard to prepare your Power Vision device with the stock (stk) and tune (djt) files needed to flash your vehicle.

- 1 Connect the Power Vision to the vehicle.
- 2 Turn the key on. The Power Vision will scan for files.

There are three possible file states:

File State 1: No compatible tune or stock files.

File State 2: No compatible tune files.

File State 3: All required files found.

3 Gauges are displayed.

Connect the Power Vision to the vehicle diagnostic port to collect ECU information. Turn the key on.



File State 1:
Press the Enter
button for ECU read
to begin the tuning
process. This process
takes about fifteen
minutes.

File State 2:

Go to <u>tunes.dynojet.com/</u> to download tune files.

File State 3:

All required files found. The Power Vision is ready to flash a tune to the connected vehicle.

GETTING STARTED

NO COMPATIBLE STOCK FILES
An ECU read is required to long the funding process.

PRESS TO TO READ ECU (PRESS TO TO EXIT WIZARD)

READ ECU

AN ECU READ CAN TAKE UP TO
15 MINUTES TO COMPLETE
PRESS TO TO CONTINUE
PRESS TO AFTURN.

MO COMPATIBLE TUNE FILES TUNES DYNOJET.COM/ PRESS OT D SEASCH ARAIN

READY TO FLASH

PRESS CO TO READ COU

FLASHING YOUR VEHICLE


The Power Vision must be paired to the connected vehicle ECU to function properly.

Note: Once paired to the vehicle ECU, the Power Vision will not work on another vehicle without purchasing a tune license.

- 1 From the Main Menu, select Flash Tune.
- 2 Select the tune file (.djt) and press Enter to view the Tune Info. Note: The Dynojet tune file (.djt) is a tune file which is different (better than stock performance or the necessary file when bolting on an exhaust, for example); the stock file (.stk) is the direct duplicate of what the OEM shipped.
- 3 Press Enter to accept the tune and pair the Power Vision to the vehicle.

Note: Pair to vehicle will only happen on the first flash.


- 4 Press Enter to pair and lock the Power Vision to the ECU and to begin the flash. Do not turn off the key switch or disconnect the Power Vision during the flash.
- 5 After the flash is complete, turn the key off and wait 45 seconds before turning the key back on to start.

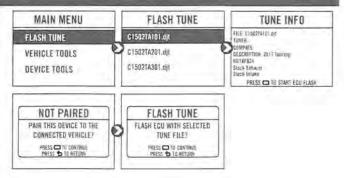

VIEWING THE VEHICLE INFORMATION

This menu allows you to view the device status (paired/not paired), VIN #, Model ID, ECU serial number, tune compat, and checksum compat.


Select Vehicle Tools>Vehicle Information.

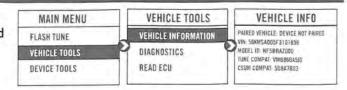

VIEWING THE DIAGNOSTIC CODES

This menu allows you to read and clear diagnostic trouble codes.

- 1 To read codes, select Vehicle Tools>Diagnostics>Active Codes.
- 2 To clear codes, select Vehicle Tools>Diagnostics>Clear Codes.

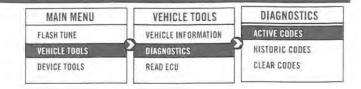

READING THE ECU

This menu allows you to read the ECU. This process takes about fifteen minutes.


Select Vehicle Tools>Read ECU.



RESTORING THE ECU

This menu allows you to restore the ECU. Use Restore ECU if the device does not complete the flash or if your vehicle will not start.


Select Vehicle Tools>Restore ECU.

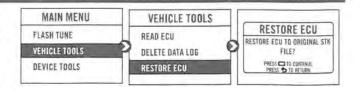

CONFIGURING GAUGES

Make your Power Vision device yours; display the channels you want to see with four user-customizable full-color gauge screens. Each gauge screen has four configurable channels. Monitor channels such as Wideband, AFR, Boost, and integrated belt temperature sensor. Sample gauges shown here; for a complete list of monitors available, open the tune file in Power Core or scroll through the gauges on the device when configuring or selecting channels for the list of options.

- 1 From the Main Menu, select Device Tools>Configure Gauges.
- 2 Select a gauge screen and press Enter.
- 3 Select a channel and press Enter.
- 4 Select a channel from the list and press Enter.
- 5 Select the precision or units for that channel and press Enter.
- 6 Continue setting up the remaining channels as desired.
- 7 Continue configuring the remaining gauge screens as desired.

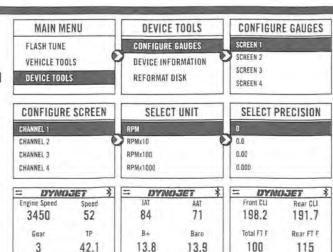




LOGGING DATA

The Power Vision is a powerful logging tool to diagnose running issues. Use the Power Vision to log all vehicle operating data and review the data in the Power Core software. Troubleshoot an issue such as knock, speed/RPM limitation, throttle blade closure and more by keeping the Power Vision mounted to view and record channels.

- 1 Press the **Log** ©button to begin logging. The Power Vision screen will illuminate a bright red banner across the top when logging.
- 2 Press the Log button again to stop logging.
- 3 Use the Power Core software to view log files.

Snapshot Log: Press and hold the Log ⊚ button for two seconds to record the previous two minutes of operating time.

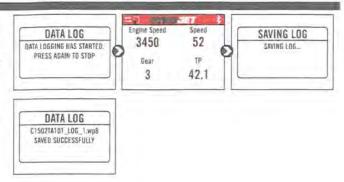

DELETING DATA LOGS

This menu allows you to delete data logs.


- 1 Select Vehicle Tools>Delete Data Log.
- 2 Select a specific log to delete or select *Delete All Logs*.



VIEWING THE DEVICE INFORMATION

This menu allows you to view the device firmware version, serial number, and stock code.

Select Device Tools>Device Information.

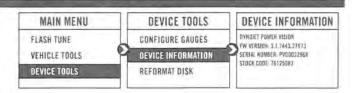

REFORMATTING THE DISK

This menu allows you to reformat the disk and erase all data. Select Device Tools>Reformat Disk.




CHANGING THE SETTINGS

This menu allows you to rotate the screen allowing you to change the orientation of the Power Vision device along with adjusting the screen brightness. Turn the brightness up and make your screen pop!

Select Device Tools>Settings>Rotate Screen to flip the screen.

Select Device Tools>Settings>Brightness to change the screen brightness.

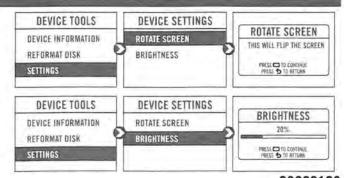

UPDATING THE DEVICE

This menu allows you to update the device with the latest firmware.

- 1 Go to www.dynojet.com.
- 2 From the top navigation menu, select Support>Downloads.
- 3 Click Power Vision 3.
- 4 Click the **Firmware** drop-down and download the Power Vision 3 Firmware for Polaris.
- 5 Save the file to your device.
- 6 Select Device Tools>Update Device.

MAIN MENU FLASH TUNE VEHICLE TOOLS DEVICE TOOLS DEVICE TOOLS DEVICE TOOLS UPDATE DEVICE PV3_3.2.7607.20491.dfu PV3_9.2.7607.20491.dfu UPDATE DEVICE

EXPORT DIAGNOSTICS

This menu allows you to create a BIN file containing device information used by Dynojet Tech Support.

- 1 Select Device Tools>Export Diagnostics.
- 2 If requested by Dynojet Tech Support, connect your Power Vision to a computer and email the BIN file to PV3tech@dynojet.com.



USING THE POWER VISION UPDATE CLIENT

This stand alone application will launch the Update Client allowing you to update your Power Vision with the latest firmware, retrieve additional tunes, or restore the Power Vision to the original Dynojet factory settings.

- 1 Connect the Power Vision to your computer using the included USB cable.
- 2 Navigate to the POWERVISION drive attached to your computer and run the **Update.exe** file.
- 3 Click Update to load the current firmware. If the Update button is grayed out, your Power Vision already has the latest firmware.
- 4 Click Restore to reload all original Dynojet tune and stock files.
- 5 Click Get Tunes to open the Dynojet Tune Finder. Follow the instructions to Upload your PV_Info.txt file and retrieve new tunes.
- 6 Click Manual Firmware Update to navigate to and load a version of firmware already saved on your computer.

Update Restore Get Tunes Manual Firmware Update Firmware Version: 2.11.7703.23803 S/h. PY00029757 1.0.3.0

INSTALLING THE POWER CORE SOFTWARE

Download the Power Core software and take tuning to a whole new level.

Note: Downloading the Power Core software is optional and not necessary to use the Power Vision.

- 1 Go to www.dynojet.com.
- 2 From the top navigation menu, select Support>Downloads.
- 3 Click Power Vision 3.
- 4 Click the Software drop-down and download the Dynojet Power Core software.
- 5 Double-click the saved file to begin installation. Follow the on-screen prompts. Refer to the Power Core Help for more information.





PUSH THE LIMIT